

# DESIGN AND DIAGNOSTICS OF AN ALTERNATOR



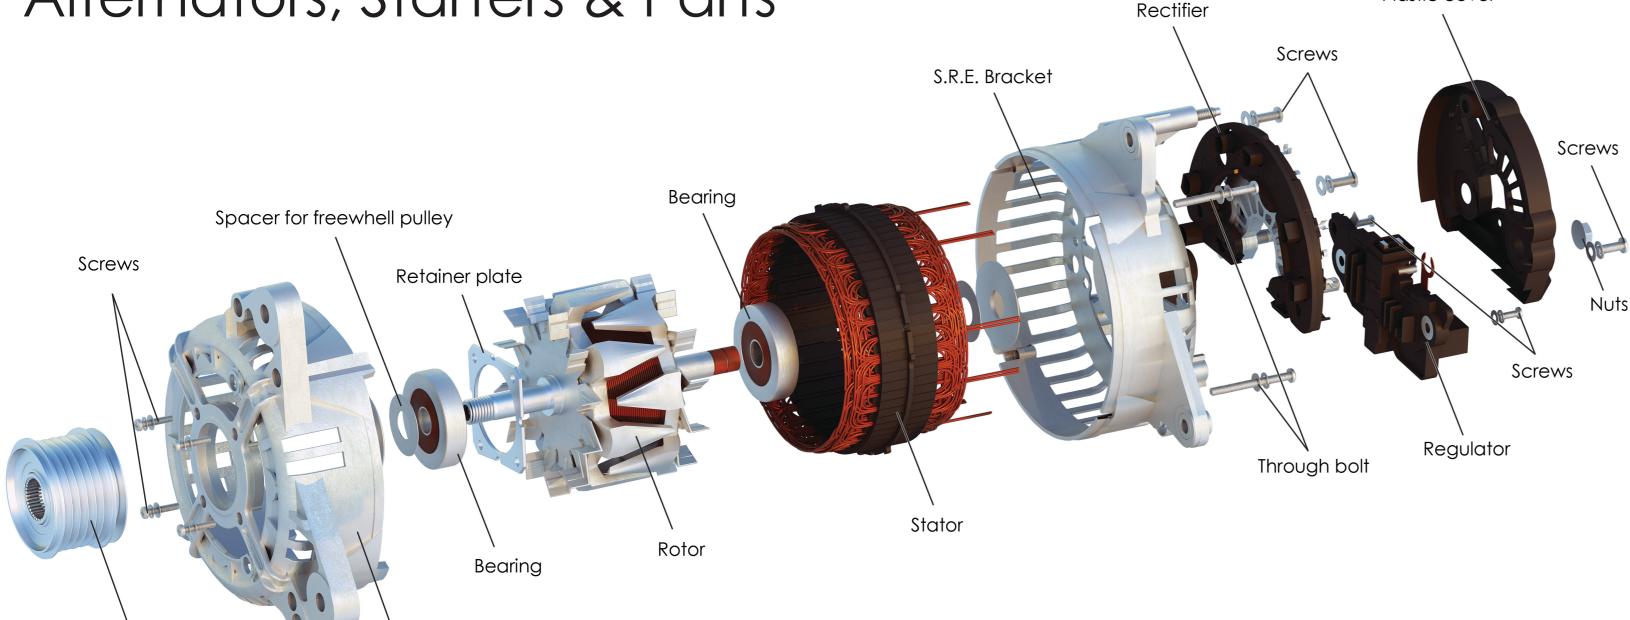

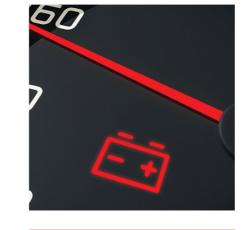

Plastic cover


## SYMPTOMS

Control light doesn't appear after the ignition is switched

**CAUSES** 

- loose cables

regulator

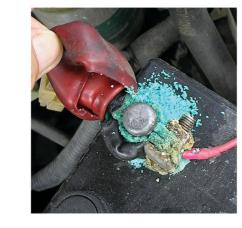

### SYMPTOMS

The battery doesn't charge



### **SYMPTOMS**

The battery is continuously overcharged



SYMPTOMS

Interrupted battery charging

CAUSES



**SYMPTOMS** 

**CAUSES** 

- loose /worn out V-belt

Excessive noise

**CAUSES** 

- defective light or bulb - Faulty battery or damaged cables and/or fixings - damaged alternator - damaged or defective

### **CAUSES**

- faulty battery - damaged or defective regulator

### - loose V-belt

- faulty clamps - damaged rectifier bridge

- damaged regulator

- damaged windings
- worn out bearings

### REPAIR

- the light and/or bulb should be replaced
- the mount has to be repaired
- the alternator has to be refurbished/replaced

### REPAIR

- The battery and cables have to be checked and replaced if necessary - the voltage has to be checked - the alternator has to be

refurbished/replaced

### **REPAIR**

- the battery has to be replaced - the alternator has to

refurbished/replaced

### **REPAIR**

- the V-belt tension has to be adjusted, or the V-belt has to be replaced - the clamps have to be checked - the alternator has to be

refurbished /replaced

### REPAIR

- the V-belt tension has to be adjusted, or the V-belt has to be replaced - The alternator has to be refurbished /replaced

Through



Freewheel

pulley

### **SYMPTOMS**

CAUSES

The starter does not rotate the crankshaft

- the battery is nearly

switch malfunction

- damaged, burnt fuse

electromagnetic contact

- starter motor malfunction

- mechanical problem of the

REPAIR

- the fuse has to be replaced

- the electromagnetic relay

- the battery charge level

has to be checked

has to be replaced

- the starter has to be

refurbished/replaced

- the engine has to be

checked

discharged

engine

D.E. Bracket

### **SYMPTOMS**

**CAUSES** 

The starter rotates the crankshaft too slowly.

- the battery is nearly

and/or corroded

- the cables may be loose

gnetic contact switch

(worn out brushes)

- starter motor malfunction

- poor connection in electroma-

discharged



### **SYMPTOMS**

The starter rotates but it doesn't turn the crankshaft.



### SYMPTOMS

The starter does not stop rotating



### **SYMPTOMS**

Excessive noise coming from the starter

- worn out sleeve - pinion ends wear/wheel
- damaged ignition switch

pinion or flywheel ring

CAUSES

- damaged/worn out starter

- damaged electromagnetic

### CAUSES

- gear flange wear

# REPAIR

- the battery charge level has to be checked - the cables have to be

### checked/replaced - the electromagnetic relay has to be replaced

- the starter has to be refurbished/replaced

### **REPAIR**

CAUSES

- damaged /worn out starter

pinion or flywheel ring

- damaged starter bendix

- the condition of the pinion has to be checked - the starter has to be refurbished/replaced

### REPAIR

- the condition of the pinion has to be checked - the starter has to be

### refurbished/replaced - the condition of the ignition switch has to be examined

## **REPAIR**

- the condition of the starter has to be checked - the starter has to be replaced/refurbished

